
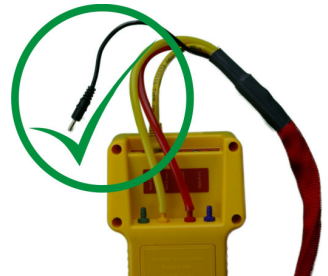


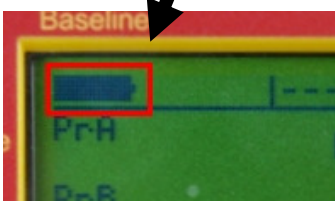




DM-2 Battery optimization with NiMH

firmware versions 2.29 and later.

- Won't turn on
- Won't charge
- Loss of power during test
- High reading with no pressure applied

<p>To use gauge now:</p> <ul style="list-style-type: none"> • Connect the charger. • Press the reset button 	<p>4. Screen MUST show it is charging.</p> 	<p>To prevent socket damage: Leave charger disconnected.</p> <p>Run on batteries only.</p> 
<p>To charge batteries:</p> <p>1. Connect the charger. <i>NON rechargeable batteries will damage the gauge.</i></p> 	<p>5. Charge for 8 hours.</p> 	<p>To increase battery life: Leave charger disconnected.</p>
<p>2. Press the reset button</p>	<p>.... or until battery icon stops moving indicating a completed charge.</p> 	<p>Tip: Transport unplugged.</p> 
<p>3. Press [On] & [Exit] to get the main screen to appear.</p> 	<p>Tip: Turning off the backlight and the Auto-Zero will vastly increase battery life.</p>	<p>DM-2 will run for about 12 hours between charges. Replace batteries with 4 new 2100MAh, AA, NiMH batteries after 2 years.</p>